Acer Aspire 1510 Series

User's Guide

Downloaded from www.Manualslib.com manuals search engine

Copyright © 2004
All Rights Reserved

Acer Aspire 1510 Series Notebook Computer User's Guide
Original Issue: March 2004

Changes may be made periodically to the information in this publication without obligation to notify any person of such revision or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date, and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondense concerning your unit should include the serial number, model number, and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without the prior written permission of Acer Incorporated.

Acer Aspire 1510 Series Notebook computer

Model Number : _____

Serial Number: _____

Purchase Date: _____

Place of Purchase: _____

All trademarks and registered trademarks are the properties of their respective companies.

Downloaded from www.Manualslib.com manuals search engine

English

First things first

Your guides

A set of guides is provided to help you set up and use your Aspire computer.:

The *Just for starters*... poster shows you how to set up your computer.

This *User's Guide* provides clear and concise information on using your computer productively. You are advised to read it thoroughly and keep it handy for future reference.

For more information on our products, services, and support, please visit our web site: www.acer.com.

Basic care and tips for using your computer

Turning your computer on and off

To turn on your computer, open the lid and press the power button above the keyboard.

To turn the power off, you can do any of the following:

- Click on the Start button in Windows, and then select **Shut Down** on the popup menu.
- Push the power button.

  To use this method, you must first click on the **Power Management** icon in Windows Control Panel, and then check that the power button is set to shut down the computer when pressed. See Windows Help for more information.

Downloaded from www.Manualslib.com manuals search engine

Note: If you are unable to shut down the computer in the usual way, press and hold the power button for more than four seconds. You should then wait at least two seconds before turning the computer on again.

Taking care of your computer

Your computer will serve you well if you take care of it.

- Do not expose the computer to direct sunlight. Do not place it near sources of heat, such as a radiator.
- Do not expose the computer to temperatures below 0°C (32°F), or above 50°C (122°F).
- Do not expose the computer to magnetic fields.
- Do not expose the computer to rain or moisture.
- Do not spill water or any liquid on the computer.
- Do not subject the computer to heavy shock or vibration.
- Do not expose the computer to dust or dirt.
- Do not place objects on top of the computer.
- Do not slam the lid shut. Close the computer gently.
- Do not place the computer on unstable or uneven surfaces.

Taking care of your AC adapter

It is important that you look after your AC adapter.

- Do not connect the adapter to any other device.
- Do not step on the power cord or place heavy objects on it. Route the power cord away from areas where people might walk on it or trip over it.
- Do not pull on the power cord when disconnecting from the mains power socket. Grasp and pull the plug instead.
- The total ampere ratings of equipment plugged into a power strip should not exceed the ampere rating for that power strip.

Downloaded from www.Manualslib.com manuals search engine

Taking care of your battery pack

It is also important that you look after your computer's battery pack.

- Use the correct battery model for your computer. Do not use other kinds of batteries.
- Turn the power off before removing or replacing the battery.
- Do not tamper with the battery. Keep the battery away from children.
- Dispose of batteries according to local regulations. Recycle if possible.

Cleaning and servicing

When cleaning your computer, it is important that you follow these steps:

- Turn off the computer and remove the battery.
- Disconnect the AC adapter.
- Clean with a soft cloth moistened with a little water. Do not use liquid or aerosol cleaners.

Refer to the chapter entitled “Frequently asked questions” on page 61 if any of the following occurs:

- You drop the computer or damage the case.
- You spill liquid on the computer.
- The computer does not operate normally.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Contents

First things first iii
Your guides iii
Basic care and tips for using your computer iii

Getting familiar with your computer 1
A tour of your computer 3
Front view 3
Left view 5
Right view 6
Rear view 7
Bottom view 8
Features 9
Display 10
Indicators 11
Keyboard 13
Special keys 13
Keyboard ergonomics 17
Touchpad 18
Touchpad basics 18
Launch keys 20
Storage 21
Inserting and ejecting a diskette 21
Ejecting the optical drive tray 22
Emergency ejection of the optical drive tray 22
Connectivity options 23
Ethernet and LAN 23
Fax/data modem 24
Audio 25
Securing your computer 26
Security slot 26
Passwords 26

Operating on battery power 27
Battery pack 29
Battery pack characteristics 29
Installing and removing the battery pack 30
Charging the battery 31
Checking the battery level 31
Optimizing battery life 31
Battery-low warning 32
Power management 33

Downloaded from www.Manualslib.com manuals search engine

English

Peripherals and options 35
External display devices 37
External input devices 37
External keyboard 37
External keypad 37
External pointing device 37
USB devices 38
IEEE 1394 Port 39
Printer 40
Audio devices 40
Expansion devices 41
PC Card 41
Miscellaneous options 43
Battery pack 43
AC adapter 43
Key component upgrades 44
Memory upgrade 44
Hard disk upgrade 45

Moving with your computer 47
Disconnecting from the desktop 49
Moving around 50
Preparing the computer 50
What to bring to short meetings 50
What to bring to long meetings 50
Taking the computer home 51
Preparing the computer 51
What to bring with you 51
Special considerations 51
Setting up a home office 52
Traveling with the computer 53
Preparing the computer 53
What to take with you 53
Special considerations 53
Traveling internationally with your computer 54
Preparing the computer 54
What to take with you 54
Special considerations 54

Software 55
System software 57
Launch Manager 57
BIOS Setup Utility 58

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting 59
Frequently asked questions 61

Appendix A Specifications 65

Appendix B Notices 71

Index 87

Downloaded from www.Manualslib.com manuals search engine

English

Downloaded from www.Manualslib.com manuals search engine

Getting familiar with your computer

Downloaded from www.Manualslib.com manuals search engine

Your Aspire 1510 series notebook computer combines solid performance, versatility, multimedia capabilities and portability with a stylish design. Increase your productivity by working wherever you are.

This chapter provides an in-depth "tour" of your computer's features.

Downloaded from www.Manualslib.com manuals search engine

A tour of your computer

After setting up your new Aspire notebook computer, as illustrated in the Just for starters... poster, take a few minutes to explore the unit.

Front view

#	Item	Description
1	Display	Large liquid crystal display (LCD) provides visual output.
2	Power button	Turns the computer on and off.
3	Launch keys	4 buttons that can be programmed to start frequently used applications.

Downloaded from www.Manualslib.com manuals search engine

English

#	Item	Description
4	InviLink™ button (Manufacturing option)	Enables or disables wireless LAN feature.
5	Bluetooth™ button (Manufacturing option)	Enables or disables Bluetooth functionality.
6	Touchpad	Touch sensitive pad that functions like a computer mouse.
7	Click buttons & 4-way scroll key	Right and left buttons that provide the same functions as the buttons on a computer mouse. The scroll key scrolls the contents of a window up and down, as well as right and left.
8	Speakers	Speakers that deliver stereo audio output.
9	Palm rest	Provides a comfortable platform for your hands when typing on the keyboard.
10	Keyboard	Full-size keyboard for inputting typed data.
11	Status indicators	Seven light emitting diodes (LED) that show the status of the computer and its components.
12	Latch	Locks and releases the lid.

Note: The wireless communication and Bluetooth buttons work for models with 802.11g wireless LAN and Bluetooth only.

Downloaded from www.Manualslib.com manuals search engine

Left view

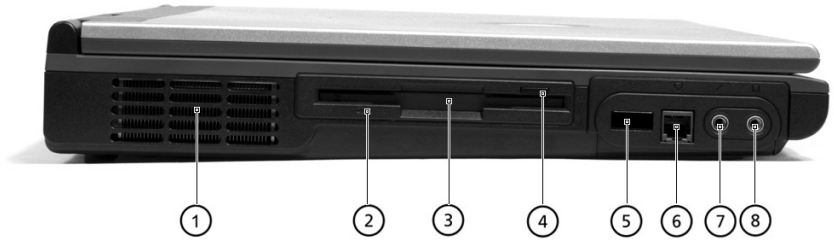

#	Item	Description
1	Ventilation slots	Enables the computer to stay cool, even after prolonged use.
2	Floppy activity indicator	LED that turns on and off when the floppy is activated.
3	Floppy disk drive / 4-in-1 card reader	Supports a standard 3.5” diskette or 4-in-1 card reader (Manufacturing option).
4	Floppy disk eject button	Press the eject button to remove a diskette from the floppy disk drive.
5	Infrared port	Interfaces with infrared devices (e.g., infrared printer, IR-aware computer).
6	Modem jack	Connects the built-in fax/data modem to a phone line.
7	Microphone-in jack	Connects an external microphone for audio input.
8	Headphone jack	Connects headphones for audio output.

Downloaded from www.Manualslib.com manuals search engine

English

Right view

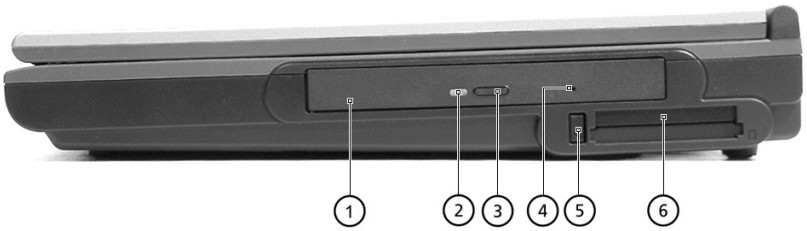

#	Item	Description
1	Optical drive	Depending on your model, the optical drive is one of the following: • DVD/CD-RW combo drive for reading CDs and DVDs and writing to CD-RWs. • DVD Dual drive for reading both DVD+/-RWs and writing to DVD+/-RWs. • DVD Super Multi drive for reading DVD+/-RWs, DVD-RAM and writing to DVD+/-RWs, DVD-RAM.
2	Optical disc access indicator	LED that indicates when an optical disc is being read or written.
3	Optical drive eject button	Press the eject button to remove a disc from the optical drive.
4	Optical drive emergency eject hole	Used to eject an optical disc when the computer is turned off.
5	PC card eject button	Press the eject button to remove a PC card from the PC card slot.
6	PC card slot	The slot supports a standard Type II or Type III PC card (PCMCIA or CardBus).

Downloaded from www.Manualslib.com manuals search engine

Rear view

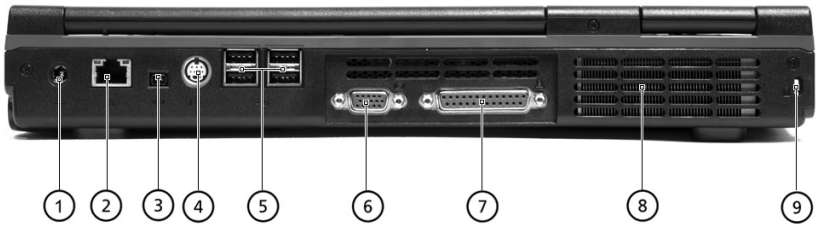

#	Item	Description
1	DC-in jack	Connects the AC adapter.
2	Network jack	Connects the computer to an Ethernet 10/100/1000-based network.
3	IEEE 1394 port	Connects IEEE 1394 devices.
4	S-video	Connects to a television or display device with S-video input.
5	USB ports	Four 2.0 ports for connecting USB devices.
6	External display port	Connects an external (VGA) display monitor.
7	Parallel port	Connects a parallel device, such as a printer.
8	Ventilation slots	Enables the computer to stay cool, even after prolonged use.
9	Kensington lock slot	For attaching a security connector.

Downloaded from www.Manualslib.com manuals search engine

English

Bottom view

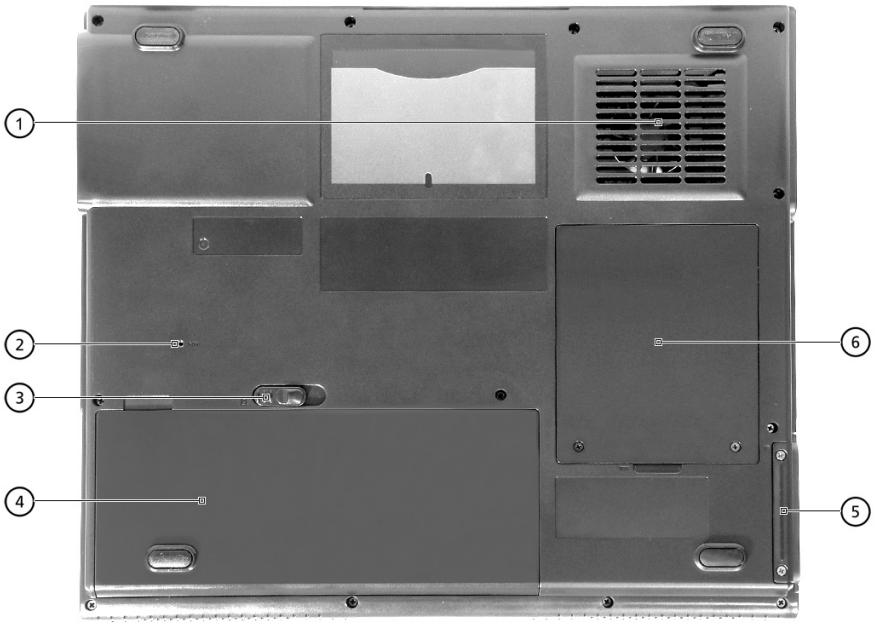

#	Item	Description
1	Ventilation slots	Enables the computer to stay cool, even after prolonged use.
2	Reset switch	Forces the computer to shut down in the event of system lockup. Note: Any unsaved data will be lost.
3	Battery pack release latch	Slide and hold the latch, and then pull the battery to remove it from the unit.
4	Battery pack	The computer's removable battery.
5	Hard disk bay	Removable cover provides access to the computer's hard drive.
6	Memory compartment	Removable cover provides access to the memory slots for upgrading the computer's memory.

Downloaded from www.Manualslib.com manuals search engine

Features

Performance

- AMD Athlon™ 64 processor with 1MB L2 cache, supporting HyperTransport™ technology.
- nVIDIA® nForce™3 chipsets
- 2 memory slots supporting DDR SDRAM, upgradeable to 2GB.
- High-capacity, Enhanced-IDE hard disk.

Multimedia

- Built-in optical drive (DVD/CD-RW combo, DVD Dual or DVD Super Multi).
- 15.0" TFT XGA (1024x768 resolution) or SXGA+ (1400x1050 resolution) panel.
- Built-in stereo speakers.
- Audio input and output jacks.

Connectivity

- Integrated 10/100/1000 Mbps Ethernet connection.
- Built-in 56Kbps fax/data modem.
- Four universal serial bus (USB 2.0) ports.
- One IEEE 1394 port.
- 802.11g Wireless LAN and Bluetooth (manufacturing optional).

Human-centric design

- All-in-one design (incorporating hard drive, optical drive and floppy disk drive).
- Rugged, yet extremely portable, construction.
- Stylish appearance.
- Full-size keyboard with four programmable launch keys.
- Comfortable palm rest area with well-positioned touchpad.

Expansion

- PC card slot enables a range of add-on options.
- Upgradeable hard disk and memory modules.

Downloaded from www.Manualslib.com manuals search engine

English

Display

- The 15.0” display panel provides a large viewing area for maximum efficiency and ease-of-use. The Thin-Film Transistor (TFT) supports XGA or SXGA+ resolution.
- nVIDIA® 8X GeForce™4 448 Go or GeForce™ FX Go5700 AGP card with 64MB of video memory.
- 3D graphics engine support.
- Supports simultaneous display between LCD and CRT display.
- S-video for output to a television or display device that supports S-video input.
- “Automatic LCD dim” feature that automatically selects the best setting for the display in order to conserve power.
- Dual display capability.

Downloaded from www.Manualslib.com manuals search engine

Indicators

Your computer provides an array of three indicators located above the keyboard, in addition to four indicators positioned at the front of the palm rest area. These indicators show the status of the computer and its components.

The three indicators located above the keyboard provide the following status information:

Icon	Description
	Caps Lock activity.
	Num Lock activity.
	Hard Disk Drive activity.

Note: The keypad lock must be turned on to use the embedded numeric keypad.

Downloaded from www.Manualslib.com manuals search engine

English

The four indicators located at the front of the unit provide the following status information:

Icon	Item	Description
	Power mode	• Steady green -- power on • Flashing orange -- standby mode • Orange -- hibernation mode
	Battery mode	• Green -- fully charged • Flashing orange -- being charged • Orange -- low on power
	Wireless LAN mode	Lights to Indicate status of wireless LAN (optional) communication.
	Bluetooth mode	Lights to indicate that Bluetooth (optional) is enabled.

Downloaded from www.Manualslib.com manuals search engine

Keyboard

The keyboard features full-size keys with an embedded keypad, separate cursor control keys, two Windows keys, and twelve function keys (hot keys).

Special keys

Lock keys

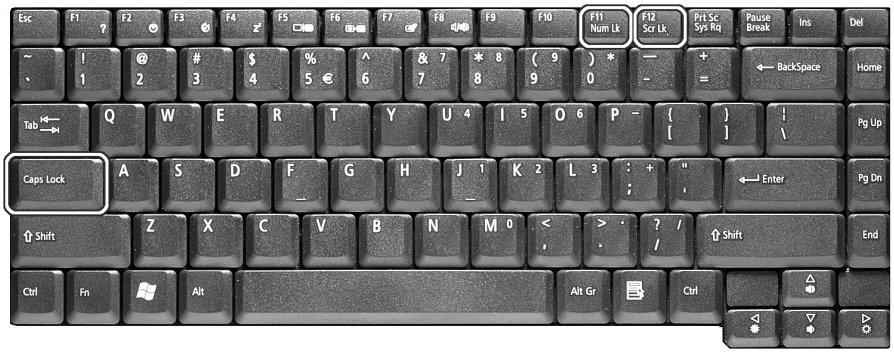

The computer features three lock keys, each with its own status indicator light.

Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters are typed in uppercase. Toggle on and off by pressing the Caps Lock key on the left side of the keyboard.
Num Lock	When Num Lock is on, the embedded numeric keypad can be used. Toggle on and off by pressing the Fn + F11 keys simultaneously.
Scroll Lock	When Scroll Lock is on, the screen toggles up or down one line at a time when the up and down cursor control keys are pressed.

Note: Scroll Lock doesn't work in all applications. Toggle on and off by pressing the Fn + F12 keys simultaneously.

Downloaded from www.Manualslib.com manuals search engine

English

Embedded keypad

The embedded keypad functions like a desktop numeric keypad. It is indicated by small blue numbers and characters on the applicable keys.

To use the embedded numeric keys, toggle the Num Lk on by pressing the Fn + F11 keys simultaneously.

With the embedded keypad turned on, the following actions are possible:

Desired Access	Num lock On	Num lock Off
Number keys on embedded keypad	Type numbers using embedded keypad in the normal way.	
Cursor control keys on embedded keypad	Hold down the Shift key while using the cursor keys on the embedded keypad.	Hold Fn key while using cursor-control keys.
Main keyboard keys	Hold down the Fn key while typing letters using the embedded keypad keys. Simultaneously press the Shift key for capital letters.	Type letters in the normal way.

Downloaded from www.Manualslib.com manuals search engine

Windows keys

The keyboard features two keys that provide Windows-specific functions.

Key	Description
Windows key	Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of functions: + Tab activates the next Taskbar button. + E opens the My Computer window. + F1 opens Help and Support. + F opens the Find: All Files dialog box. + M minimizes all windows. Shift + + M undoes the minimize all windows (+ M) action. + R opens the Run dialog box.
Application key	This key has the same effect as clicking the right mouse button; it opens the application's context menu.

Downloaded from www.Manualslib.com manuals search engine

English

Hot keys

Using the Fn key with another key creates a hot key, providing a quick and convenient method for controlling various functions.

To use a hot key, first hold down the Fn key. Next, press the second key in the combination. Finally, release both keys.

Your computer provides the following hot keys:

HotKey	Function	Description
Fn + F1	Hot key help	Displays help on hot keys.
Fn + F2	Setup	Accesses the computer's configuration utility.
Fn + F3	Power management scheme toggle	Switches the power management scheme used by the computer (function available if supported by operating system). See "Power management" on page 33.
Fn + F4	Sleep	Puts the computer in Sleep mode. See "Power management" on page 33.
Fn + F5	Display toggle	Switches display output between the display screen, external monitor (if connected) and both the display screen and external monitor.

Downloaded from www.Manualslib.com manuals search engine

HotKey	Function	Description
Fn + F6	Screen blank	Turns the display screen backlight off to save power. Press any key to return.
Fn + F7	Touchpad toggle	Turns the internal touchpad on and off.
Fn + F8	Speaker toggle	Turns the speakers on and off.
Fn + ↑	Volume up	Increases the speaker volume.
Fn + ↓	Volume down	Decreases the speaker volume.
Fn + →	Brightness up	Increases the screen brightness.
Fn + ←	Brightness down	Decreases the screen brightness.

Euro key

Your computer supports the new Euro currency character. First, hold down the Alt Gr key, and then press the Euro key.

Keyboard ergonomics

The wide palm rest area provides a comfortable platform for your hands when typing on the keyboard. The ergonomic design enables you to adopt a relaxed, yet very efficient, typing style.

Downloaded from www.Manualslib.com manuals search engine

English

Touchpad

The built-in touchpad is a PS/2- compatible pointing device that senses movement on its surface. The cursor responds to your finger movements on the touchpad. In addition, the two click buttons provide the same functionality as a computer mouse, while the scroll key enables easy up and down scrolling in documents and web pages.

The touchpad is located in the middle of the palm rest area, providing maximum comfort and efficiency.

Touchpad basics

Use the touchpad as follows:

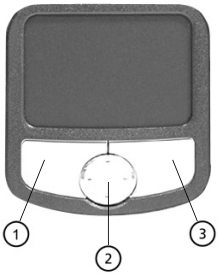

- Slide your finger over the surface of the touchpad to control the movement of the cursor. Tap the touchpad to perform selection and execution functions.
- Press the left (1) and right (3) click buttons to perform selection and execution functions, just as you would use the buttons on a computer mouse.
- Use the scroll key (2) to scroll through long documents and web pages. Press the top of the key to scroll up, and the bottom to scroll down; left to scroll left, and right to scroll right.

Downloaded from www.Manualslib.com manuals search engine

Function	Left Button	Right Button	4-Way Scroll Key	Tap
Execute	Click twice quickly.			Tap twice quickly.
Select	Click once.			Tap once.
Drag	Click and hold. Then, slide your finger across the touchpad to drag the cursor over the selection.			Tap twice quickly. On the second tap, slide your finger across the touchpad to drag the cursor over the selection.
Access content menu		Click once.		
Scroll			Click and hold the up/ down/left/ right button.	

Note: Keep your fingers, as well as the surface of the touchpad, clean and dry. The touchpad is sensitive to your finger movements: the lighter your touch, the better the response. Tapping hard will not increase the touchpad's responsiveness.

Downloaded from www.Manualslib.com manuals search engine

English

Launch keys

Located at the top of the keyboard are six buttons, in addition to the power button. These buttons are called launch keys. They are designated as key 1, key 2, key 3, key 4, key 5 and key 6, from right to left.

By default, key 1 is used to launch the email application and key 2 is used to launch the Internet browser. Keys 3 and 4 start the Launch Manager application. Key 5 and Key 6 are used to enable the Wireless LAN and Bluetooth features. The first four launch keys can be set by the user. To set the launch keys, run the Acer Launch Manager.

Launch key	Default application
Email	Launches your email application.
Web browser	Launches your Internet browser.
P1	User-programmable
P2	User-programmable
InviLink	Enables your 802.11g Wireless LAN (optional)
Bluetooth	Enables your Bluetooth (optional)

Downloaded from www.Manualslib.com manuals search engine

Storage

Your computer's all-in-one design offers a variety of data storage options:

- The high capacity Enhanced-IDE hard disk drive.

  The hard drive is upgradeable, enabling you to increase your storage capacity in the future. Consult your dealer if you need to upgrade.
- The floppy disk drive.

  The floppy disk drive accepts standard 1.44MB 3.5" diskettes.
- The high speed optical drive.

  Depending on your model, you have a DVD/CD-RW combo, DVD-Dual or DVD Super Multi drive. The optical drive provides increased storage capacity, as well as offering a host of multimedia possibilities.

See the section entitled--“A tour of your computer” on page 3--for the locations of these drives.

Inserting and ejecting a diskette

To insert a diskette in the floppy disk drive:

- Push the diskette into the drive. Make sure that the label is on the outer edge, and facing upwards.
- The diskette will click in place, and the floppy disk eject button will pop out.

To remove a diskette from the floppy disk drive:

- Push the floppy disk eject button.
- The diskette will be released, and partially pop out of the drive.
- Pull the diskette from the drive.

Downloaded from www.Manualslib.com manuals search engine

English

Ejecting the optical drive tray

To eject the optical drive tray:

- With the computer turned on, press the optical drive eject button.
- The tray will be released, and partially pop open.
- Gently pull the tray out to its limit.

To load an optical disc:

- Place a CD or DVD on the open tray. Align the disc's center hole with the tray's spindle.
- Gently push down on the disc until it clicks in place on the spindle.
- Gently push in the tray until it clicks closed.

Emergency ejection of the optical drive tray

If you need to eject the optical drive tray when the computer is turned off, push a straightened paper clip into the optical drive emergency eject hole. The tray will be released, and partially pop open.

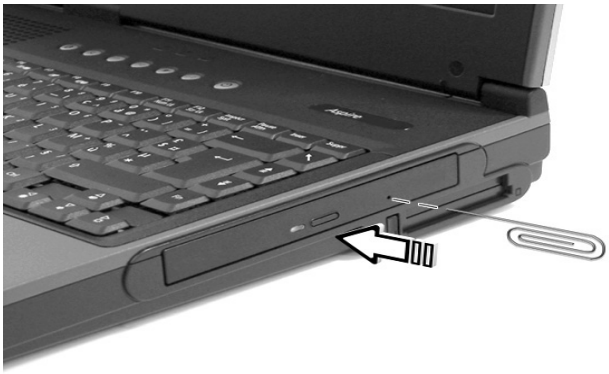

Downloaded from www.Manualslib.com manuals search engine

Connectivity options

Your computer has built-in connectivity options, enabling you to hook up to a network or communicate over a phone line.

Ethernet and LAN

The integrated network feature allows you to connect your computer to an Ethernet-based (10/100/1000Mbps) network.

To use the network feature, plug an Ethernet cable into your computer's network jack, and then connect the other end to a network jack or hub on your network.

See Windows Help for information on setting up a network connection.

Downloaded from www.Manualslib.com manuals search engine

English

Fax/data modem

Your computer features a built-in fax/data modem, enabling you to communicate over a phone line. This means that you can connect to the Internet via a dialup account with an ISP, log in to your network from a remote location, or send faxes.

Warning: Your modem is not compatible with digital phone lines. Plugging the computer into a digital phone system will damage the modem.

To use the fax/data modem, plug a phone cable into your computer's modem jack, and then connect the other end to a telephone jack.

Downloaded from www.Manualslib.com manuals search engine

Audio

Your computer includes an integrated stereo audio system. Built-in stereo speakers are located at the front of the unit.

Volume is adjusted using software, such as Volume Control in Windows, or any other application that provides a volume adjustment control.

Two audio ports on the left side of the computer enable external devices to be connected. See "A tour of your computer" for the location of the audio ports. For information on connecting external devices, see "Audio devices" in the section entitled, "Peripherals and options."

Downloaded from www.Manualslib.com manuals search engine

English

Securing your computer

Your computer features hardware and software security solutions, in the form of a slot for a Kensington lock and a password facility.

Security slot

A slot for a Kensington slot enables you to physically protect your computer from theft. Use this feature as follows:

- Wrap a security lock cable around a heavy or immoveable object, such as a drawer handle on a file cabinet, or a table leg.
- Insert the lock into the slot on the computer, turn it 90°, and then lock it in place.

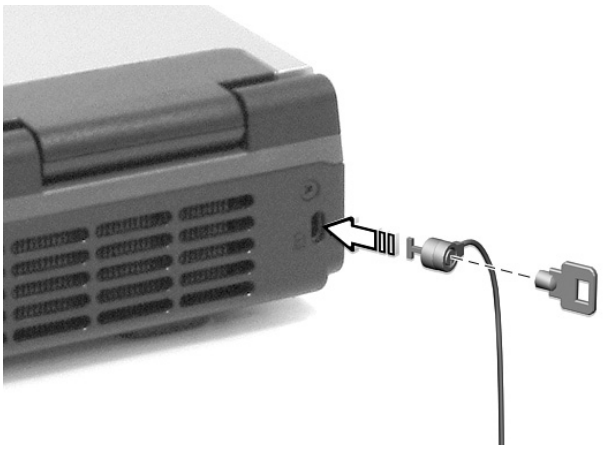

Passwords

You can protect your computer from unauthorized access by setting Windows password protection. The user must enter the password before beginning a Windows session.

- First, open **User Accounts** in Windows **Control Panel** and select your account.
- Click **Create a Password**, and then set your desired password.
- Click **Performance and Maintenance**, **Power Options** in **Control Panel**.
- On the **Advanced** tab, select the option to prompt for password when computer resumes from standby.

To cancel password protection, reset the password with a blank password.

Downloaded from www.Manualslib.com manuals search engine

Operating on battery power

Downloaded from www.Manualslib.com manuals search engine

Your Aspire 1510 series notebook computer operates on battery or AC power.

This chapter provides information for operating on battery power, as well as information on how your computer manages and saves power.

Downloaded from www.Manualslib.com manuals search engine

Battery pack

The computer uses a battery pack that gives you long use between charges.

Battery pack characteristics

The battery pack has the following characteristics:

- Employs current battery technology standards.
- Delivers a battery-low warning.

The battery is recharged whenever you connect the computer to the mains power supply. Your computer supports charge-in-use, enabling you to recharge the battery while you continue to operate the computer. However, recharging with the computer turned off results in a significantly faster charge time.

The battery will come in handy when you travel or during a power failure. It is advisable to have an extra fully charged battery pack available as backup. Contact your dealer for details on ordering a spare battery pack.

Maximizing the battery's life

Like all other batteries, your computer's battery will degrade over time. This means that the battery's performance will diminish with time and use. To maximize your battery's life, you are advised to adhere to the recommendations set out below.

Conditioning a new battery pack

Before you use a battery pack for the first time, there is a "conditioning" process that you should follow:

1 Insert the new battery without turning the computer on.

2 Connect the AC adapter and fully charge the battery.

3 Disconnect the AC adapter.

4 Turn on the computer and operate using battery power.

5 Fully deplete the battery until the battery-low warning appears.

6 Reconnect the AC adapter and fully charge the battery again.

Downloaded from www.Manualslib.com manuals search engine

Follow these steps again until the battery has been charged and discharged three times.

Use this conditioning process for all new batteries, or if a battery hasn't been used for a long time. If the computer is to be stored for more than two weeks, you are advised to remove the battery pack from the unit.

Warning: Do not expose battery packs to temperatures below 0°C (32°F) or above 60°C (140°F). Extreme temperatures may adversely affect the battery pack.

By following the battery conditioning process you condition your battery to accept the maximum possible charge. Failure to follow this procedure will prevent you from obtaining the maximum battery charge, and will also shorten the effective lifespan of the battery.

In addition, the useful lifespan of the battery is adversely affected by the following usage patterns:

- Using the computer on constant AC power with the battery inserted. If you want to use constant AC power, you are advised to remove the battery pack after it is fully charged.
- Not discharging and recharging the battery to its extremes, as described above.
- Frequent use; the more you use the battery, the faster it will reach the end of its effective life. A standard computer battery has a life span of about 500 charges.

Installing and removing the battery pack

Important! Before removing the battery from the unit, connect the AC adapter if you want to continue using your computer. Otherwise, turn off the computer first.

To install a battery pack:

1 Align the battery with the open battery bay; make sure that the end with the contacts will enter first, and that the top surface of the battery is facing up.

2 Slide the battery into the battery bay and gently push until the battery locks in place.

Downloaded from www.Manualslib.com manuals search engine

To remove a battery pack:

1 Slide the battery release latch to release the battery.

2 Pull the battery from the battery bay.

Charging the battery

To charge the battery, first make sure that it is correctly installed in the battery bay. Plug the AC adapter into the computer, and connect to a mains power outlet. You can continue to operate your computer on AC power while your battery is charging. However, charging the battery with the computer turned off results in a significantly faster charge time.

Note: You are advised to charge the battery before retiring for the day. Allowing the battery to charge overnight before traveling enables you to start the next day with a fully charged battery.

Checking the battery level

The Windows Power Meter indicates the current battery level. Rest the cursor over the battery/power icon on the taskbar to see the battery's present charge level.

Optimizing battery life

Optimizing battery life helps you get the most out of battery operation, prolonging the charge/recharge cycle and improving recharging efficiency. You are advised to follow the suggestions set out below:

- Purchase an extra battery pack.
- Use AC power whenever possible, reserving your battery for on-the-go use.
- Eject a PC card if it is not being used, as it will continue to draw power.
- Store the battery pack in a cool, dry place. The recommended temperature is 10°C to 30°C. Higher temperatures cause the battery to self-discharge faster.
- Excessive recharging decreases the battery life.
- Look after your AC adapter and battery.

Downloaded from www.Manualslib.com manuals search engine

English

Battery-low warning

When using battery power pay attention to the Windows Power Meter.

Warning: Connect the AC adapter as soon as possible after the battery-low warning appears. Data will be lost if the battery to become fully depleted and the computer shuts down.

When the battery-low warning appears, the recommended course of action depends on your situation:

Situation	Recommended Action
The AC adapter and a power outlet are available.	1. Plug the AC adapter into the computer, and then connect to the mains power supply. 2. Save all necessary files. 3. Resume work. Turn off the computer if you want to recharge the battery rapidly.
An extra fully charged battery pack is available.	1. Save all necessary files. 2. Close all applications. 3. Shut down the operating system to turn off the computer. 4. Replace the battery pack. 5. Turn on the computer and resume work.
The AC adapter or a power outlet is unavailable. You have no spare battery pack.	1. Save all necessary files. 2. Close all applications. 3. Shut down the operating system to turn off the computer.

Downloaded from www.Manualslib.com manuals search engine

Power management

Your computer features a built-in power management unit that constantly monitors system activity. System activity refers to any activity involving one or more of the following devices: keyboard, touchpad/mouse, floppy disk drive, hard disk drive, optical drive, peripherals connected to the computer, and video memory. If no activity is detected for a period of time (the settings are controlled in Windows Power Management), the computer turns off some, or all, of these devices in order to conserve power.

Your computer employs a power management scheme that supports ACPI (Advanced Configuration and Power Interface), enabling maximum power conservation without compromising system performance. ACPI allows Windows to control the amount of power given to each device attached to the computer. In this way, Windows handles all power-saving chores for your computer. Refer to Windows Help for more information.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Peripherals and options

Downloaded from www.Manualslib.com manuals search engine

Your Aspire 1510 series notebook computer offers good expansion capabilities.

This chapter provides information on connecting peripherals to expand your system. It also describes how to upgrade key components to enhance system performance and keep your computer in step with the latest technology.

You are advised to consult your dealer for information on peripherals. In addition, make sure that you read the manuals and other documentation provided with new hardware.

Downloaded from www.Manualslib.com manuals search engine

External display devices

You can connect an external (VGA) monitor or projector to your computer's external display port. See the section entitled "Display" for information on using the computer's simultaneous display and multi-display features.

Use the Fn + F5 hot key to toggle the display setting between the computer's LCD panel and the external display device. See “Hot keys” on page 16 for more information.

External input devices

You can connect a variety of input devices to your computer's USB ports, providing increased functionality and greater ease-of-use. In addition, the USB ports can be used to connect many other peripheral devices, such as digital cameras, printers and scanners. See “Expansion devices” on page 41 for more information on connecting USB devices.

External keyboard

Your computer features a full-size keyboard. However, if you prefer, you can connect an external keyboard to one of your computer's USB ports. This enables you to enjoy the comfort and added features of a full-size desktop system keyboard when inputting typed data on your notebook computer.

External keypad

Your computer features an embedded keypad that, when combined with the Num Lock feature, enables you to easily input typed numeric data. Alternatively, you can connect a 17-key numeric keypad to one of your computer's USB ports. This enables you to enjoy the benefits of a numeric keypad without interfering with your use of the computer's keyboard for typing text.

External pointing device

Your computer features a sensitive touchpad pointing device with two click buttons and a scroll key. However, if you prefer to use a conventional mouse or other pointing device, you can connect it to one of your computer's USB ports.

Downloaded from www.Manualslib.com manuals search engine

English

USB devices

Your computer features four USB (Universal Serial Bus) 2.0 ports for connecting a range of USB peripherals. See “External input devices” on page 37 and “Printer” on page 40 for information on connecting a USB keyboard, keypad, mouse or printer. Other common USB devices include digital cameras, scanners, and external storage devices.

USB is plug and play, which means that you can connect and start using a USB device without having to restart your computer. You can also disconnect the device at any time.

A further advantage of USB is the ability to use USB hubs. This means that several devices can share a USB port simultaneously.

Downloaded from www.Manualslib.com manuals search engine

IEEE 1394 Port

The computer's IEEE 1394 port allows you to connect to an IEEE 1394 supported device like a digital video camera.

See your video or digital camera's documentation for details.

Downloaded from www.Manualslib.com manuals search engine

English

Printer

Your computer supports both parallel and USB printers.

Refer to the printer's manual for information on:

- Setting up the hardware.
- Installing the necessary drivers in Windows.
- Operating instructions.

To use a USB printer, simply connect the device to one of your computer's USB ports, and then wait for Windows to find the new hardware.

To connect a parallel printer, first shut down the operating system. Connect the printer to the parallel port, and then restart the computer. Wait for Windows to find the new hardware.

Audio devices

Your computer offers built-in stereo speakers. See the section entitled “Audio” on page 25 for more information on these features. However, in addition to the integrated devices, the two audio ports on the left side of the unit enable you to connect external audio input and output devices.

You can plug an external microphone into your computer's microphone-in jack. This offers the convenience of greater freedom of movement, as well as improved audio input quality.

Connect headphones to the headphone jack for private listening and improved audio output quality.

Downloaded from www.Manualslib.com manuals search engine

Expansion devices

PC Card

Your computer features a PC card slot that supports a standard Type II or Type III PC card (PCMCIA or CardBus). This greatly increases your computer's usability and expandability. A variety of PC cards are available, such as flash memory, SRAM, fax/data modem, LAN, and SCSI cards. Consult your dealer for information on PC card options for your computer.

Note: Refer to your card's manual for details on how to install and use the card.

To insert a PC card:

1 Align the card with your computer's PC card slot. Make sure that the edge with the connectors is facing the slot, and that the card is the right way up. Many cards are marked with an arrow to help you insert them correctly.

2 Slide the card into the slot, and push gently until the card connects.

3 If necessary, connect the card's cable to the jack on the outer edge of the card.

4 Windows will automatically detect the card's presence.

Downloaded from www.Manualslib.com manuals search engine

To remove a PC card:

1 Close the application that is using the PC card.

2 Double click on the PC card icon on the taskbar, and then select the option to safely remove the card. Wait for the message telling you that it is now safe to remove the card.

3 Press the PC card eject button to partially eject the card.

4 Pull the card from the slot.

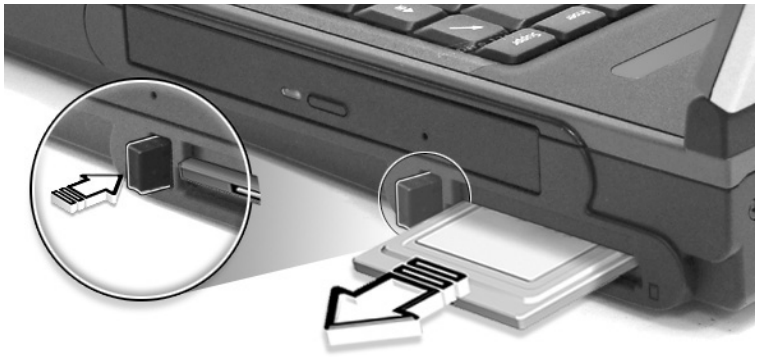

Downloaded from www.Manualslib.com manuals search engine

Miscellaneous options

Battery pack

It is a good idea to have a spare battery, especially when you travel with your computer. This greatly increases your productive range when you are on the move.

AC adapter

Having a spare AC adapter allows you to keep one in two different places. For example, you could have one AC adapter at home and another at work. This means that you don't have to carry an AC adapter when traveling between your two base locations.

Downloaded from www.Manualslib.com manuals search engine

English

Key component upgrades

Your computer is designed to deliver solid performance. However, in time, you might find that your applications demand even more computing power. For this reason, you are able to upgrade key components.

Note: Contact your authorized dealer if you decide to perform a key component upgrade.

Memory upgrade

Memory is expandable to 2GB, employing 256/512 MB or 1 GB industry standard soDIMMs (Small Outline Dual Inline Memory Modules). The computer supports DDR (Double Data Rate) SDRAM.

There are two memory slots on your computer, one of which is occupied by standard memory. You can upgrade memory by installing a memory module into the other available slot, or replacing the standard memory with a higher-capacity memory module.

Installing memory:

1 Turn off the computer. Make sure that the AC adapter is disconnected, and then remove the battery pack.

2 Turn the computer over to access the memory compartment on the bottom of the unit. Remove the screw from the memory compartment door, and then lift the door off.

Downloaded from www.Manualslib.com manuals search engine

3 Insert the memory module diagonally in the slot, and then press down gently until it clicks in place.

4 Replace the memory compartment door, and fasten the screw.

The computer automatically detects the new module and reconfigures the memory.

Hard disk upgrade

It is possible to replace your hard disk with a higher capacity drive when you need more storage space. Your computer uses a 9.5mm 2.5-inch Enhanced-IDE hard disk. Consult your dealer if you need to perform a hard disk upgrade.

Downloaded from www.Manualslib.com manuals search engine

English

Downloaded from www.Manualslib.com manuals search engine

Moving with your computer

Downloaded from www.Manualslib.com manuals search engine

Your Aspire 1510 series notebook computer is ideal for taking with you when you move around.

This chapter provides tips on things to consider when traveling with your computer.

Downloaded from www.Manualslib.com manuals search engine

Disconnecting from the desktop

Before moving with your computer, you must turn it off and disconnect all peripherals:

1 Save your work and close all applications.

2 Shut down Windows to turn off your computer.

3 Unplug the AC adapter from the mains outlet, and then disconnect it from the computer.

4 Disconnect any external devices, such as a keyboard, mouse, or printer, that are attached to your computer.

5 If you are using a security lock cable, disconnect the lock from the computer.

6 Pack your computer in a strong, waterproof bag or case.

Downloaded from www.Manualslib.com manuals search engine

English

Moving around

Sometimes you might need to move your computer a short distance. For example, you might need to move from your office desk to a meeting room. In these situations, you don't have to shut down the operating system.

Preparing the computer

First, disconnect any peripherals that you don't want to take with you. Next close the lid, placing your computer in Standby mode. You can now safely carry it around the building with you.

When you are ready to use your computer again, open the lid and then press the power button to bring it out of Standby mode.

What to bring to short meetings

If your battery is fully charged, you probably won't need to take anything else with you to the meeting.

What to bring to long meetings

For longer meetings, take along the AC adapter. You can use mains power throughout the meeting, or you can run down your battery first, and then connect the AC adapter after receiving the battery-low warning.

If the meeting room does not have an available power outlet, reduce your computer's power consumption by putting it in Standby mode during long periods of inactivity. It is advisable to take along a spare battery if you have one.

Downloaded from www.Manualslib.com manuals search engine

Taking the computer home

When you move between your office and home you will need to prepare your computer for the short trip.

Preparing the computer

After disconnecting your computer from the desktop, prepare the unit as follows:

1 Remove all media from the drives. Loaded media can damage the drive heads during transit.

2 Pack the computer in a protective case that is padded to guard against knocks. Make sure that the unit cannot slide around inside the case.

Caution: Avoid packing items next to the top of the computer, as this could result in damage to the screen.

What to bring with you

If you don't have spare items at home, it is advisable to take along the AC adapter and this User's Guide.

Special considerations

To protect your computer in transit, it is advisable to pay attention to the following:

- Minimize the effect of temperature changes. Keep your computer with you instead of placing it in storage holds.
- Avoid leaving your computer in a hot car.
- Changes in temperature and humidity can cause condensation to form in your computer. Before turning the computer on, allow it to return to room temperature, and then check the screen for signs of condensation. If the temperature change is greater than 10°C (18°F), allow the computer to come to room temperature slowly by placing it in a room with a temperature between the outside and room temperatures.

Downloaded from www.Manualslib.com manuals search engine

Setting up a home office

If you frequently work on your computer at home, as well as at work, it may be worthwhile purchasing a second AC adapter. This will allow you to travel lighter, as you can keep an AC adapter in each location.

You might also find it worthwhile keeping a second set of peripherals at home, such as a keyboard, keypad, mouse and printer.

Downloaded from www.Manualslib.com manuals search engine

Traveling with the computer

Sometimes you might need to make longer trips with your computer.

Preparing the computer

Prepare the computer as you would for moving between your office and home. It is advisable to make sure that the battery is fully charged. If you are traveling by air, you might be required to turn on the computer during security checks.

What to take with you

It is advisable to take the following items with you:

- AC adapter.
- Spare, fully charged battery packs.
- Additional printer driver files (if you plan to use another printer).
- Phone and network cables (if you plan to use the computer's modem and network connections).

Special considerations

In addition to the considerations for taking your computer home, keep the following in mind:

- Always take your computer as carry-on luggage.
- If possible, have your computer manually inspected at security checks. Although the computer can pass safely through security X-ray machines, you should never expose it to a metal detector.
- If carried separately, avoid exposing floppy disks to hand-held metal detectors.

Downloaded from www.Manualslib.com manuals search engine

English

Traveling internationally with your computer

Occasionally you might need to travel between countries with your computer.

Preparing the computer

Prepare the computer as you would for normal travel. Remember to take special precautions for air travel.

What to take with you

It is advisable to take the following items with you:

- AC adapter.
- Power cords that are appropriate for the countries you plan to visit.
- Spare, fully charged battery packs.
- Additional printer driver files (if you plan to use another printer).
- Phone and network cables (if you plan to use the computer's modem and network connections). Check that your modem is suitable for the telephone system in the countries you plan to visit. You might have to use a PC card modem in some locations.

Special considerations

In addition to the considerations for normal travel with your computer, keep the following in mind when traveling internationally:

- Check that your power cord is suitable for the local power supply. If necessary, purchase a power cord that meets local requirements. Avoid using converter kits.
- If you plan to connect over a phone line, check that the computer's modem and your phone cord are suitable for the local phone system. If necessary, purchase a PC card modem that meets local requirements.
- If carried separately, avoid exposing floppy disks to hand-held metal detectors.

Downloaded from www.Manualslib.com manuals search engine

Software

Downloaded from www.Manualslib.com manuals search engine

Your Aspire 1510 series notebook computer includes system utilities.

This chapter provides information on the important software that comes with your computer.

Downloaded from www.Manualslib.com manuals search engine

System software

Your computer comes preloaded with the following software:

- Microsoft® Windows® operating system.
- Hardware BIOS setup utility.
- System utilities, drivers and application software.

Note: To run software applications in Windows, first click on the Start button. Next, select the appropriate folder, and then click on the application icon. To learn about the software and utility, make use of the online help provided by the software.

Launch Manager

Launch Manager allows you to set the four launch keys located above the keyboard. See “Launch keys” on page 20 for the location of the launch keys.

You can access the Launch Manager by clicking on Start, All Programs, and then Launch Manager to start the application.

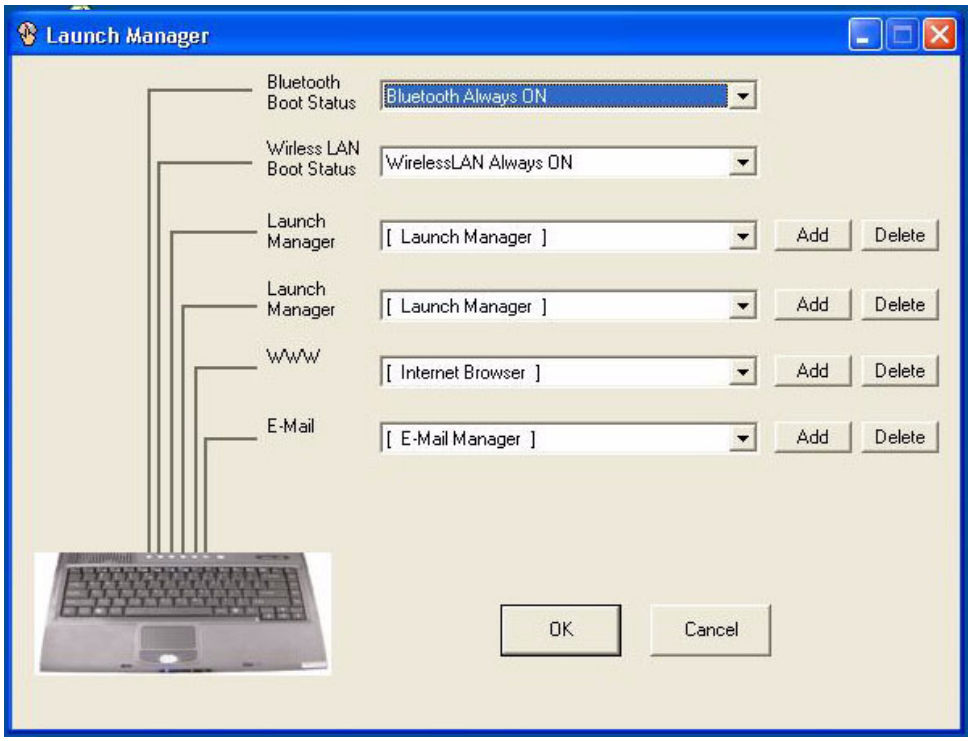

Downloaded from www.Manualslib.com manuals search engine

English

BIOS Setup Utility

The BIOS (basic input/output system) contains important information used to configure the hardware and system software settings. Your computer reads the BIOS when it first starts up, before it loads the operating system.

Your computer's BIOS includes a built-in setup utility called Insyde Software SCU (system configuration utility). It can be started shortly after you turn the computer on, by pressing the F2 key during POST.

The BIOS setup utility displays summary information on your computer, its devices, processor and memory.

Your computer is already configured for optimal performance, and so you should not need to run this utility. However, you may need to change the BIOS settings if you encounter configuration problems in the future. Refer to “Frequently asked questions” on page 61 if a problem arises.

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Downloaded from www.Manualslib.com manuals search engine

This chapter instructs you on how to deal with common system problems. Please read it before calling a technician.

Solutions to more serious problems may require opening the computer. Do not attempt to open and service the computer by yourself. Contact your dealer or an authorized service center for assistance.

Downloaded from www.Manualslib.com manuals search engine

Frequently asked questions

This section suggests solutions to commonly encountered problems.

I press the power button, but my computer does not start or boot-up.

Look at the Power status indicator:

- If it is not lit, no power is being delivered to the computer. Check the following:
  - If you are running on battery power, the battery may be low and unable to power the computer. Connect the AC adapter to recharge the battery pack.
  - If you are running on mains power, make sure that the AC adapter is properly plugged in to the computer and to the power outlet.
- If it is lit, check the following:
  - Make sure that there is not a non-bootable (non-system) diskette in the floppy disk drive. If so, remove the diskette and then press Ctrl-Alt-Del to restart the system.

Nothing appears on the screen.

The computer's power management system automatically blanks the screen to save power. Press any key to turn the display back on.

If pressing a key does not turn the display back on, check the following:

- The brightness level might be too low. Press Fn + → hot key to increase the screen brightness level.
- The display device might be set to an external monitor. Press the Fn + F5 hot key to toggle the display setting.
- The system may be in standby mode. Try pressing the power button to resume.

The image is not full-screen.

Make sure that the resolution is set to a resolution your system supports:

- Right click on your Windows desktop and select Properties to bring up the Display Properties dialog box. Alternatively, click on the Display icon in Control Panel.
- Click on the Settings tab to check the resolution setting. Resolutions lower than the specified resolution result in a display that is less than full-screen.

Downloaded from www.Manualslib.com manuals search engine

English

There is no audio coming from my computer.

Check the following:

- The volume may be muted. In Windows, look at the volume control icon on the taskbar. If it is crossed-out, click on the icon and deselect the Mute option.
- The volume level may be too low. In Windows, click on the volume control icon on the taskbar, and then use the slider control to increase the volume level.
- If headphones are connected to the headphone jack on the computer, your computer's built-in speakers will be turned off.

My external microphone does not work.

Check the following:

- Make sure that the external microphone is properly plugged into the microphone-in jack on the computer.
- Make sure that the volume is not muted or set too low.

I can't eject the optical drive tray with my computer turned off.

The computer needs to be turned on for the optical drive eject button to function. If you need to eject the optical drive tray when the computer is turned off, push a straightened paper clip into the optical drive emergency eject hole. See “Emergency ejection of the optical drive tray” on page 22 for more information.

The keyboard does not respond.

Try attaching an external USB keyboard to one of your computer's USB ports. If it works, the internal keyboard might have become disconnected. Contact your dealer or an authorized service center.

The floppy disk drive cannot read a diskette.

Check the following:

- Make sure the diskette is properly inserted in the floppy disk drive.
- Make sure that the diskette is formatted.
- Try to read a second diskette. If this works, then the first diskette might have a problem.
- If the diskette is not the cause of the problem, then the drive head might be dirty. Clean it using a drive head cleaning kit.

Downloaded from www.Manualslib.com manuals search engine

The optical drive cannot read a disc.
Check the following:

- Make sure that the disc is supported by the drive. If your computer connects a CD-ROM drive, it can read CDs but cannot read DVDs. If your computer has a DVD drive, it can read CDs and DVDs.
- When placing a disc in the drive tray, make sure that it is secure on the spindle of the drive tray.
- Make sure that the disc is free from scratches or smudges. If the disc is dirty, clean it using a disc cleaning kit.
- If the disc is OK, the drive head might be dirty. Clean it using a drive head cleaning kit.

The printer does not work.
Check the following:

- Make sure that the printer is connected to a power outlet and it is turned on.
- Check that the cable is properly connected to the appropriate ports on both the computer and the printer.
- If you are using a printer connected to your computer's parallel port, restart the computer. Windows needs to find the new hardware and install the necessary drivers.

I want to set up my location to use the internal modem.
Follow these steps:

- Click on **Start**, and then click on **Control Panel**.
- Double-click on **Phone and Modem Options**.
- In the **Dialing Rules** tab, begin setting up your location.

Refer to Windows Help for more information.

When the battery is 95-99% full, it won't charge to 100% capacity.
To preserve the life of the battery, the system only lets you charge the battery when its capacity falls below 95%. It is recommended that you run down the battery, and then fully recharge it.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Appendix A
Specifications

Downloaded from www.Manualslib.com manuals search engine

This appendix lists the general specifications of your computer.

Downloaded from www.Manualslib.com manuals search engine

Microprocessor

- AMD Athlon™ 64 processors with 1MB L2 cache, supporting HyperTransport™ technology .

Memory

- Main memory expandable to 2GB.
- Dual 200-pin soDIMM sockets.
- DDR SDRAM (Double Date Rate-Synchronous Dynamic Random Access Memory) support.
- 512 KB flash ROM BIOS.

Data storage

- One internal 3.5", 1.44 MB floppy disk drive (manufacturing option with a 4-in-1 card reader).
- One E-IDE hard disk (2.5", 9.5mm, ATA-100).
- One internal optical drive.

Display and video

- 15.0” Thin-Film Transistor (TFT) displaying at 1024 x 768 XGA or 1400x1050 SXGA+ resolutions.
- nVIDIA® 8X GeForce™4 448 Go or GeForce™ FX Go5700 AGP card with 64MB of video memory.
- Simultaneous LCD and CRT display support.
- Dual display capability.
- S-video for output to a television or display device that support S-video input.
- “Automatic LCD dim” feature that automatically selects the best setting for the display in order to conserve power.

Audio

- 16-bit stereo audio (AC'97).
- Two built-in stereo speakers.
- Audio ports for microphone-in and headphones.

Downloaded from www.Manualslib.com manuals search engine

English

Keyboard and pointing device

- 84/85-key Windows keyboard.
- Ergonomically-centered touchpad pointing device.

Downloaded from www.Manualslib.com manuals search engine

I/O ports

- One type III or type II PC Card slot (PCMCIA and CardBus).
- One IEEE 1394 port
- One RJ-11 modem jack (V.90/V.92, 56K).
- One RJ-45 network jack (Fast Ethernet 10/100/1000).
- One DC-in jack.
- One parallel port (ECP/EPP).
- One S-video port.
- One external monitor port.
- One microphone-in jack (3.5mm mini jack).
- One headphone jack (3.5mm mini jack).
- Four USB 2.0 ports.

Weight and dimensions

- 15.0”-display model with combo drive:
  - 3.77 kg (8.3 lbs).
  - 334(W) x 286.5(D) x 49(H) mm

Environment

- Temperature:
  - Operating: 5°C ~ 35°C.
  - Non-operating: -20°C ~ 65°C.
- Humidity (non-condensing):
  - Operating: 20% ~ 80% RH.
  - Non-operating: 20% ~ 80% RH.

Operating system

- Microsoft® Windows® XP operating system.

Power

- 8-cell Li-ion battery pack.
- 135W AC adapter 19V/7.1A.

Downloaded from www.Manualslib.com manuals search engine

English

Options

- 256/512 MB or 1 GB memory upgrade module.
- Additional AC adapter.
- Additional battery pack.

Downloaded from www.Manualslib.com manuals search engine

Appendix B
Notices

Downloaded from www.Manualslib.com manuals search engine

This appendix lists the general notices for your computer.

Downloaded from www.Manualslib.com manuals search engine

Energy Star Guidelines Compliance

As an Energy Star Partner, Acer Inc. has determined that this product meets the Energy Star guidelines for energy efficiency.

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

Downloaded from www.Manualslib.com manuals search engine

English

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme a la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

Hereby, Acer, declares that this Aspire 1510 series is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. (Please visit www.acer.com/about/certificates/nb for complete documents.)

Modem notices

Notice for USA

This equipment complies with Part 68 of the FCC rules. Located on the bottom side of the modem is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. Upon request, you must provide this information to your telephone company.

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will also be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If this equipment should fail to operate properly, disconnect the equipment from the phone line to determine if it is causing the problem. If

Downloaded from www.Manualslib.com manuals search engine

the problem is with the equipment, discontinue use and contact your dealer or vendor.

Caution: To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

TBR 21

This equipment has been approved [Council Decision 98/482/EC - "TBR 21"] for single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN termination point. In the event of problems, you should contact your equipment supplier in the first instance.

List of Applicable Countries

EU member states as of April 2003 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, and the United Kingdom. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.

Notice for Australia

For safety reasons, only connect headsets with a telecommunications compliance label. This includes customer equipment previously labelled permitted or certified.

Downloaded from www.Manualslib.com manuals search engine

English

Notice for New Zealand

For Modem with approval number PTC 211/03/008

1 The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

2 This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.

3 Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PC) associated with this device. The associated equipment shall be set to operate within the following limits for compliance with Telecom's Specifications:

   a There shall be no more than 10 call attempts to the same number within any 30 minute period for any single manual call initiation, and

   b The equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next call attempt.

4 Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PC) associated with this device. In order to operate within the limits for compliance with Telecom's specifications, the associated equipment shall be set to ensure that automatic calls to different numbers are spaced such that there is not less than 5 seconds between the end of one call attempt and the beginning of another.

5 This equipment shall not be set up to make automatic calls to Telecom's 111 Emergency Service.

Downloaded from www.Manualslib.com manuals search engine

For Modem with approval number PTC 211/01/030

1 The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

2 This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.

3 This device is equipped with pulse dialing while the Telecom standard is DTMF tone dialing. There is no guarantee that Telecom lines will always continue to support pulse dialing.

4 Use of pulse dialing, when this equipment is connected to the same line as other equipment, may give rise to bell tinkle or noise and may also cause a false answer condition. Should such problems occur, the user should NOT contact the telecom Fault Service.

5 This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

6 Under power failure conditions this appliance may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

7 Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PC) associated with this device. The associated equipment shall be set to operate within the following limits for compliance with Telecom's specifications, the associated equipment shall be set to ensure that calls are answered between 3 and 30 seconds of receipt of ringing.

8 This equipment shall not be set up to make automatic calls to Telecom's 111 Emergency Service.

Downloaded from www.Manualslib.com manuals search engine

English

Important safety instructions

Read these instructions carefully. Save them for future reference.

1 Follow all warnings and instructions marked on the product.

2 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

3 Do not use this product near water.

4 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.

5 Slots and openings are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.

6 This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.

7 Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.

8 If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.

9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

10 Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

11 Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

   a When the power cord or plug is damaged or frayed.

   b If liquid has been spilled into the product.

   c If the product has been exposed to rain or water.

Downloaded from www.Manualslib.com manuals search engine

d If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

e If the product has been dropped or the case has been damaged.

f If the product exhibits a distinct change in performance, indicating a need for service.

12 The Aspire 1510 series uses the lithium battery.
Replace the battery with the same type as the product's battery we recommend in the product specification list. Use of another battery may present a risk of fire or explosion.

13 Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children and dispose of used batteries promptly.

14 Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SPT-2, rated 7A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

15 Always disconnect all telephone lines from the wall outlet before serving or disassembling this equipment.

16 Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

Laser compliance statement

The CD or DVD drive used with this computer is a laser product. The CD or DVD drive's classification label (shown below) is located on the drive.

CLASS 1 LASER PRODUCT
CAUTION: INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

APPAREIL A LASER DE CLASSE 1 PRODUIT
LASERATTENTION: RADIATION DU FAISCEAU LASER INVISIBLE EN CAS D'OUVERTURE. EVITTER TOUTE EXPOSITION AUX RAYONS.

LUOKAN 1 LASERLAITE LASER KLASSE 1
VORSICHT: UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHLL AUSSETZEN

Downloaded from www.Manualslib.com manuals search engine

English

PRODUCTO LÁSER DE LA CLASE I
ADVERTENCIA: RADIACIÓN LÁSER INVISIBLE AL SER ABIERTO. EVITE EXPONERSE A LOS RAYOS.

ADVARSEL: LASERSTRÅLING VEDÅBNING SE IKKE IND I STRÅLEN.

VARO! LAVATTAESSA OLET ALTTINA LASERSÅTEILYLLE.
VARNING: LASERSTRÅLNING NÅR DENNA DEL ÅR ÖPPNAD ÅLÅ TUIJOTA SÅTEESEENSTIRRA EJ IN I STRÅLEN

VARNING: LASERSTRÅLNING NAR DENNA DEL ÅR ÖPPNADSTIRRA EJ IN I STRÅLEN

ADVARSEL: LASERSTRÅLING NAR DEKSEL ÅPNESSTIRR IKKE INN I STRÅLEN

LCD pixel statement

The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.

Macrovision copyright protection notice

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, 4,907,093, and 6,516,132 licensed for limited viewing uses only.

Radio Device Regulatory Notice

Note: Below regulatory information is for models with wireless LAN and/or Bluetooth™ only.

Downloaded from www.Manualslib.com manuals search engine

General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use.

Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth™ modules). Below information is for products with such devices.

European Union (EU)

This device complies with the essential requirements of the European Council Directives listed below:

73/23/EEC Low Voltage Directive

- EN 60950

89/336/EEC Electromagnetic Compatibility (EMC) Directive

- EN 55022
- EN 55024
- EN 61000-3-2/-3

99/5/EC Radio & Telecommunications Terminal Equipment (R&TTE) Directive

- Art.3.1a) EN 60950
- Art.3.1b) EN 301 489 -1/-17
- Art.3.2) EN 300 328-2

(for 2.4 GHz device)

Note: The applicable number varies according to the different Notified Body ID No. applied to the wireless module installed in this product. These numbers are subject to change without notice.

List of Applicable Countries

EU member states as of April 2003 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, and the United Kingdom. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.

Downloaded from www.Manualslib.com manuals search engine

English

The FCC RF safety requirement

The radiated output power of Wireless LAN Mini-PCI Card and Bluetooth Card is far below the FCC radio frequency exposure limits. Nevertheless, the Aspire 1510 series shall be used in such a manner that the potential for human contact during normal operation is minimized as follows.

1 Users are requested to follow the RF safety instructions on wireless option devices that are included in the user's guide of each RF option device.

Caution: To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm (8 inches) must be maintained between the antenna for the integrated Wireless LAN Mini-PCI Card built in to the screen section and all persons.

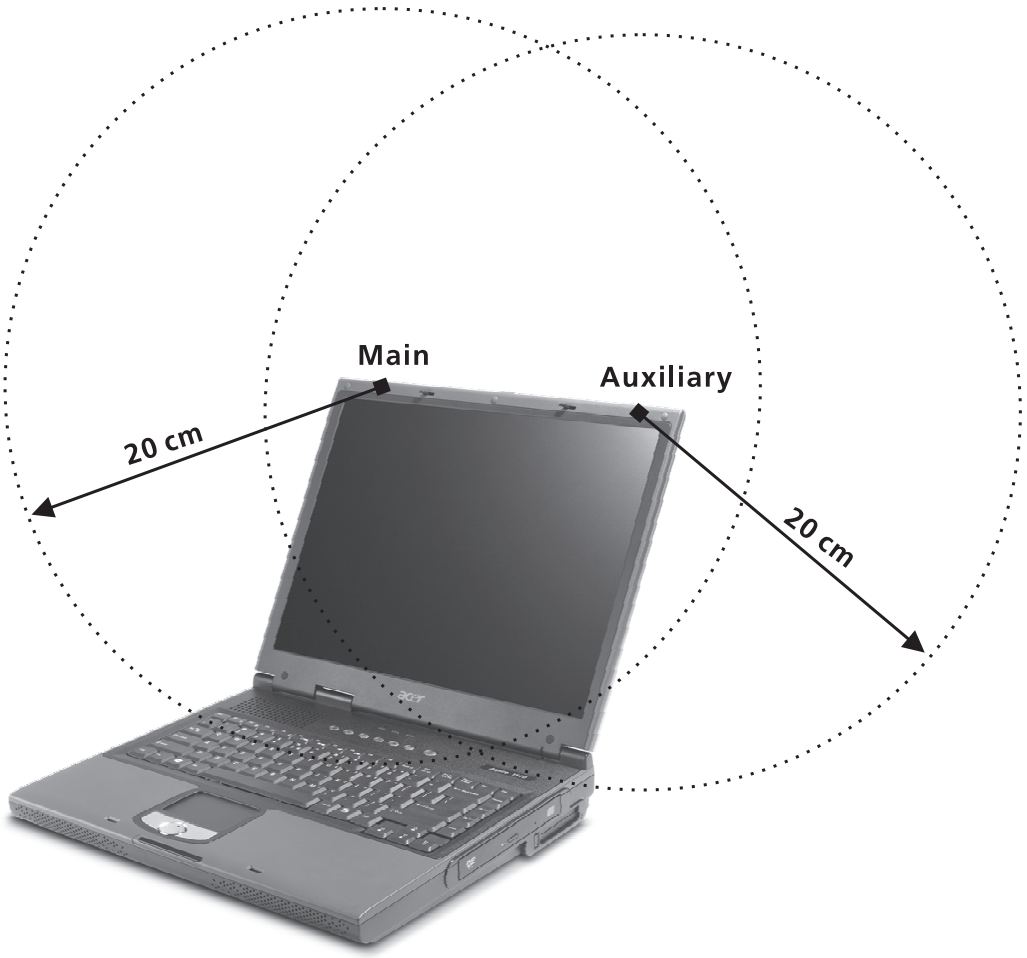

Downloaded from www.Manualslib.com manuals search engine

Note: Acer Dual-Band 11b/g Wireless Mini PCI Adapter implements transmission diversity function. The function does not emit radio frequencies simultaneously from both antennas. One of the antennas is selected automatically or manually (by users) to have good quality of radiocommunication.

2 An improper installation or unauthorized use may cause harmful interference to radio communications. Also any tampering of the internal antenna will void the FCC certification and your warranty.

Canada - Low power license-exempt radiocommunication devices (RSS-210)

a. Common information
Operation is subject to the following two conditions:
1. This device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

b. Operation in 2.4 GHz band
To prevent radio interference to the licensed service, this device is intended to be operated indoors and installed outdoors is subject to licensing.

Exposure of humans to RF fields (RSS-102)

Aspire 1510 series employs low gain integral antennas that do not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site at www.hc-sc.gc.ca/rpb.

Downloaded from www.Manualslib.com manuals search engine

English

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih
Taipei Hsien 221, Taiwan

Tel : 886-2-2696-1234
Fax : 886-2-2696-3535
www.acer.com

Declaration of Conformity for CE marking

We,

Acer Inc.
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih,
Taipei Hsien 221, Taiwan

Contact Person: Mr. Easy Lai
Tel: 886-2-8691-3089 Fax: 886-2-8691-3000
E-mail: easy_lai@acer.com.tw

Hereby declare that:

Product:	Notebook PC
Trade Name:	Acer
Model Number:	ZP2
Machine Type:	Aspire 1510
SKU Number:	Aspire 151xxx ("x" = 0~9, a ~ z, or A ~ Z)

Is in compliance with the essential requirements and other relevant provisions of the following EC directives.

Reference No.	**Title**
89/336/EEC	Electromagnetic Compatibility (EMC directive)
73/23/EEC	Low Voltage Directive (LVD)
1999/5/EC	Radio & Telecommunications Terminal Equipment Directive (R&TTE)

The product specified above was tested conforming to the applicable Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue to comply with the requirements.

Easy Lai

Easy Lai/ Director
Qualification Center
Product Assurance, Acer Inc.

2004/3/15

Date

Downloaded from www.Manualslib.com manuals search engine

Federal Communications Commission
Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The following local Manufacturer /Importer is responsible for this declaration:

Product:	Notebook Personal Computer
Model Number: Machine Type: SKU Number:	ZP2 Aspire 1510 Aspire 151xxx ("x" = 0~9, a ~ z, or A ~ Z)
Name of Responsible Party:	Acer America Corporation
Address of Responsible Party:	2641 Orchard Parkeay, San Jose CA 95134, U. S. A.
Contact Person:	Mr. Young Kim
Phone No.:	408-922-2909
Fax No.:	408-922-2606

Downloaded from www.Manualslib.com manuals search engine

English

Downloaded from www.Manualslib.com manuals search engine

Index

A

ACPI 33
audio 25
  connecting externally 40
  controlling volume 25
  troubleshooting 62

B

battery bay 8
battery pack
  battery-low warning 32
  caring for v
  characteristics 29
  charging 31
  checking charge level 31
  installing 30
  low conditions 32
  maximizing life 29
  optimizing 31
  removing 31
  using the first time 29
battery release latch 8
BIOS Setup Utility 58
  entering 58

C

caps lock 13
  on indicator 11
care
  battery pack v
  computer iv
CD
  troubleshooting 63
charging
  checking level 31
cleaning
  computer v
computer
  bringing to meetings 50
  caring for iv
  cleaning v
  disconnecting 49
  features 9
  moving around 50
  security 26
  setting up a home office 52
  taking home 51
  traveling internationally 54
  traveling on local trips 53
  turning off iii
connections
  audio 40
  external display devices 37
  external input devices 37
  keyboard, external 37
  keypad, external 37
  mouse 37
  printer 40
  USB 38
connectivity options 23
  Ethernet 23

D

diskette drive 21
display 10
  troubleshooting 61
DVD
  troubleshooting 63

E

Ethernet connection 23

F

FAQ. See frequently-asked questions
floppy drive 21
  troubleshooting 62
frequently-asked questions 61
front view 3

G

guide iii

H

hard disk 21
  upgrading 45
help iii
hotkeys 16

K

keyboard 13
  connecting externally 37
  embedded numeric keypad 14
  hotkeys 16
  lock keys 13
  troubleshooting 62

Downloaded from www.Manualslib.com manuals search engine

English

Windows keys 15
keypad
connecting externally 37

L

launch keys 20
left view 5

M

memory
compartment 8
installing 44– 45
upgrade slot 8
upgrading 44
microphone
troubleshooting 62
modem
setting location 63
mouse
connecting externally 37

N

notice
DVD copyright protection 80
num lock 13
on indicator 11
numeric keypad
embedded 14

O

optical drive 21
options
hard disk upgrade 45
memory upgrade 44
PC Cards 41
spare AC adapter 43
spare battery 43

P

palm rest 17
password 26
PC Card
inserting 41
removing 42
ports
external display 7
parallel 7
USB 5, 7
power management 33
printer
connecting 40
troubleshooting 63
problems 61
audio 62
CD 63
diskette 62
display 61
DVD 63
floppy drive 62
keyboard 62
printer 63
startup 61

R

rear view 7
right view 6

S

safety
CD or DVD 79
FCC notice 73
general instructions 78
modem notices 74
security
password 26
slot 26
service
when to call v
software
bundled 57
speakers
troubleshooting 62
Standby mode
hotkey 16
status indicators 11
status LCD 11
storage 21
floppy drive 21
hard disk 21
optical drive 21

T

touchpad 18
using 18– 19
travel
international flights 54
local trips 53

Downloaded from www.Manualslib.com manuals search engine

U
USB
connecting 38

V
volume
adjusting 25

W
Windows keys 15

Downloaded from www.Manualslib.com manuals search engine